

USB 3.1 to SATA 6G Cable

User Manual

Ver. 1.00

**All brand names and trademarks are properties of their
Respective owners.**

Contents:

Chapter 1: Introduction.....	3
1.1 Features.....	3
1.2 System Requirements	4
1.3 Package Contents.....	4
Chapter 2: Getting Started	5
2.1 Hardware Layout	5
2.2 Hardware Installation	5
2.3 Driver Installation.....	6

Chapter 1: Introduction

1.1 Features

- Compliant with USB 3.1 Specification Revision 1.0
- Compliant with USB Specifications Revision 2.0
- Support USB Super-speed Plus, USB Super-Speed, High-Speed and Full-Speed Operation
- Support USB Mass Storage Class, Bulk-Only Transport Specification Revision 1.3
- Support USB Attached SCSI Protocol Specification Revision 1.0
- Compliant with Serial ATA Specification Revision 3.2
- Bus bandwidth of Serial ATA up to 6Gbps
- Supports ATA/ATAPI Packet Command Set
- Support ATA/ATAPI LBA48 addressing mode
- Supports both SATA 2.5” and SATA 3.5” hard drives
- Supports SATA ATAPI Optical Drives
- LED to indicate driver power and activity

1.2 System Requirements

- Windows® 7/8/8.1 (32/64 bit)
- Available USB Type-C port


1.3 Package Contents

- 1 x USB 3.1 to SATA 6G Cable
- 1 x User Manual
- 1 x Power Adapter (Optional)

Note: Contents may vary depending on country/market.

Chapter 2: Getting Started

2.1 Hardware Layout

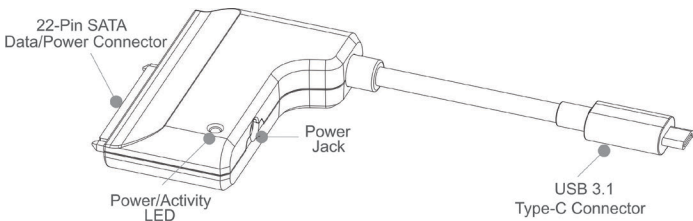

2.2 Hardware Installation

1. Connect SATA data/power connector to 2.5" or 3.5" SATA device
2. Plug the power adapter into the power jack of the USB 3.1 to SATA 6G Cable.
3. Plug the USB 3.1 to SATA 6G cable into your computer's USB-C port.

2.3 Driver Installation

Windows will automatically detect and install the drivers for the USB 3.1 to SATA 6G Cable. No extra driver installation is required for the cable.