

# **PCIe 10G SFP+ Network Adapter**

## **User Manual**

**Ver. 1.00**

**All brand names and trademarks are properties of their  
respective owners.**

# Contents:

<b>Chapter 1: Introduction .....</b>	<b>3</b>
1.1 Product Introduction .....	3
1.2 Features.....	3
1.3 Requirements .....	4
1.4 Package Contents.....	5
<b>Chapter 2: Getting Started .....</b>	<b>5</b>
2.1 Hardware Layout .....	5
2.2 Hardware Installation .....	6
2.3 Driver Installation.....	7
2.3.1 Installation for Windows.....	7
2.3.2 Installation for Linux .....	7
2.4 Verifying the installation.....	8
2.4.1 Verifying for Windows.....	8
2.4.2 Verifying for Linux .....	9

# Chapter 1: Introduction

## ***1.1 Product Introduction***

This PCIe 10G SFP+ Network Card is a cost-effective solution that delivers fast and reliable 10 Gbps network access at longer distances than copper-based networks.

Using the SFP+ transceiver of your choice, you can connect your PCI Express-based server or workstation directly to your 10G fiber optic network.

## ***1.2 Features***

- Supports common 10GbE SFP+ optical and Direct Attached Copper modules
- PCI Express Gen-3 x4 Host Bus interface
- EEE (Energy Efficient Ethernet)
- 16K Jumbo Frames
- IP, TCP, UDP checksum offloading
- IEEE 802.1Q Tagged VLAN

- Virtual NIC support
- Reduced CPU utilization and improved throughput

## ***1.3 Requirements***

### Hardware

The following system specs are recommended minimum

- PCIe slot: Available 4-Lanes PCI-Express slot gen 2.0 or later
- Processor: Quad Core 3.0GHz or higher
- RAM: 4GB memory or higher

### Software

Operating systems supported are (both 32 and 64 bits)


- Windows 7
- Windows Server 2008 R2
- Windows Server 2012
- Windows 8.1
- Windows Server 2012 R2
- Windows 10
- Linux 2.6.24 or later
- Mac OS X 10.10.3 or later

## ***1.4 Package Contents***

- 1 x PCIe 10G SFP+ Network Adapter
- 1 x User Manual

## **Chapter 2: Getting Started**

### ***2.1 Hardware Layout***

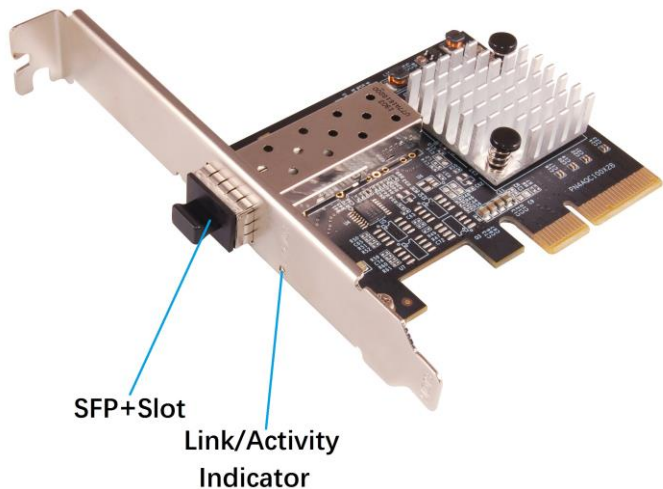

**Link/Activity Indicator:**

- When the LED is off, there is no link between the PCIe 10G SFP+ Network Card and the network
- When the LED is on, a link is established, but there is no traffic on the network
- When the LED is flashing, there is traffic on the network to which the PCIe 10G SFP+ Network Card is connected

## ***2.2 Hardware Installation***

1. Turn off the power to your computer.
2. Unplug the power cord and remove your computer's cover.
3. Remove the slot bracket from an available PCIe slot.
4. To install the card, carefully align the card's bus connector with the selected PCIe slot on the motherboard. Push the board down firmly.
5. Replace the slot bracket's holding screw to secure the card.
6. Secure the computer cover and reconnect the power cord.

## 2.3 Driver Installation

The following section shows you how to install PCIe 10G SFP+ Network Adapter driver on different operating systems.

### 2.3.1 Installation for Windows

1. Login URL <http://www.sunrichtech.com.hk/>
2. Search N-670, download driver
3. Follow the prompts to install the driver

### 2.3.2 Installation for Linux

4. Login URL <http://www.sunrichtech.com.hk/>
5. Search N-670, download driver
6. Extract the compressed driver source file to a certain directory by the following command: (Please copy the driver file “atlantic.tar.gz” from the download driver folder to a certain folder on hard drive)  

```
# tar xf atlantic.tar.gz
```
7. Now, the driver source files should be extracted under the current directory. Executing the following command to compile the driver:

# make

8. If the compilation is well, the tar xf atlantic will be created under the current directory.
9. If you want to use modprobe command to mount the driver, executing the following command to install the driver into your kernel:


# make install

## 2.4 Verifying the installation

### 2.4.1 Verifying for Windows


1. Click on the “**Device Manager**” tab in the Windows Control Panel.

**Start > Control Panel > Device Manager**

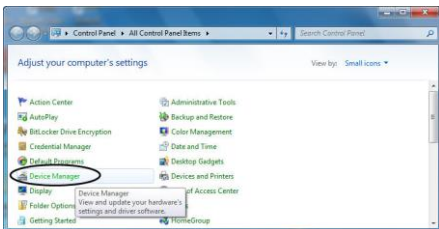



2. Entry “**Network adapters**” item, and you can read “**Aquantia Felicity Network Adapter**” in the Device Manager.



## 2.4.2 Verifying for Linux

1. You can check whether the driver is loading by using following commands:

```
# lsmod | grep atlantic
```

```
# ifconfig -a
```

If there is a device name, ethX, shown on the monitor, the linux driver is load. Then, you can use the following command to activate the ethX.

```
# ifconfig ethX up, where X=0,1,2,...
```